# Quick start guide

Ikusi Flow configuration



00		0.0/20	0.0	0.2	
4					0-/
st I					
	( <u> </u>			CZ P	
No					Q.C.2.2



## WI-FI option

Connect to the Ikusi Flow wi-fi signal

Type 10.0.0.1 in the browser address bar

CABLE option Connect Ethernet cable to the HUB module

Type 192.168.1.100 in the browser address bar





#### Language and password





#### **Required settings**



### Installation description

Sin SIM 🕈			14:57				52%
	m 📃		10.0.0.1		Ċ		Ð
		Į		ia			
	_						
	INST	ALLATI	ION DES	CRIPT	ION		
	Type the r Descriptio This inforr complete Informatic	elevant informat n and save. nation identifies he installation r n can be altered	tion into the fields t the specific install report. d at anytime.	below: Name, L lation, and is us	ocation &		
	NAME						
	Name						
	LOCATI	NC					
	Locatio	ı					
	DESCR	PTION					
	Descrip	ion					
					NEXT		
	_						



Home





#### Wizard: Step 1 and 2 Cable and terrestrial services selection





#### Wizard: Step 3 Satellite services selection





#### Wizard: Step 4 HDMI services selection



Step 4 Wizard: HDMI	Sin 60M ♥ * <			± + □ ⊗ >	Note: Advanced setting of HDM services must be activat the main menu.
	IP You can ena	HDMI SERVICES	manages.		
	ENC	7			
		SOURCE	INPUT DESCRIPTION	INPUT TYPE	
HDML input connector activation		A	7-A	HD	Rename the description
	g	В	7-в 💋	HD	of the service
		С		HD	
		D		HD	

ed setting of HDMI s must be activated from menu.

10

#### Wizard: Step 5 Additional services selection





#### Wizard: Step 6 Summary Screen







HEADQUARTERS P° Miramón, 170 · 20014 San Sebastián · SPAIN . Tel.: +34 943 44 88 00 · Fax: +34 943 44 88 20 · television@ikusi.com · www.ikusi.tv