

# ECS 2408KPEM PANEL


## INSTALLATION INSTRUCTIONS

### 1. Grounding wire preparation


A. Insert Grounding Tap to panel bracket. Fixing with screw.

B. Screw on the grounding wire, screw size M6.

\*Grounding wire prepared by installers

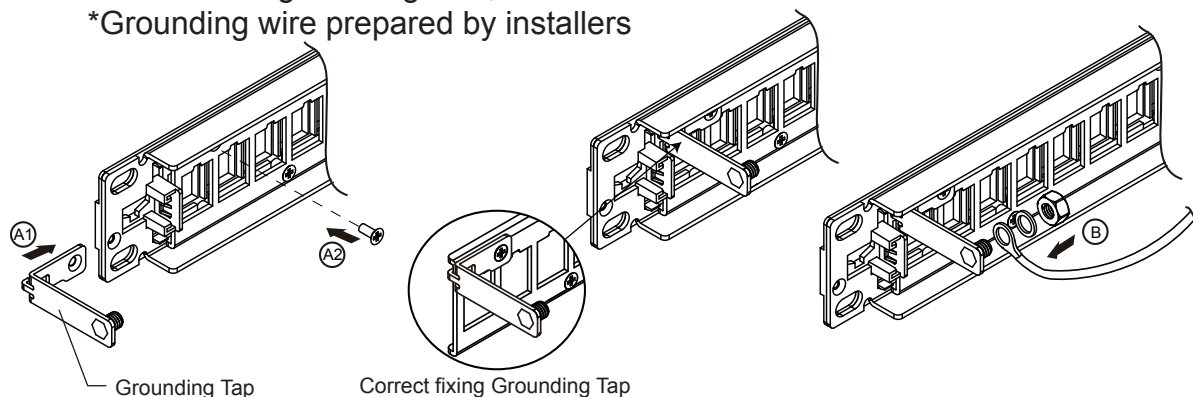

### 2. Install all wired jacks on panel, expand the Foldable Wire Management Grip, slide the grips into fixture at both ends of the patch panel.

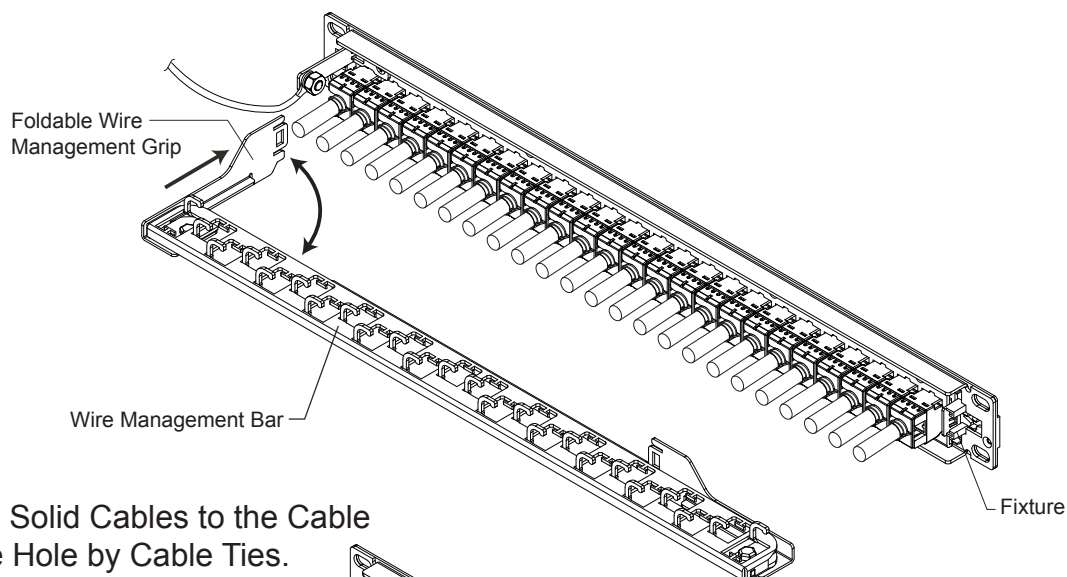

### 3. Fix the Solid Cables to the Cable Fixture Hole by Cable Ties.

