

ALIP68C/FPSC6A

ECS IP68 Field Plug kabel AFP STP C6A Inkl plugg, kappsling, täcklock



①

Trä först sexkantsmuttern på kabeln.

②

Montera kontaktdonet enligt separat instruktion. se sid 2.

③

Trä sedan kontakthuset över kontakten.

④

Säkerställ att fjäderbläcket på kontakten hamnat i rätt position i kontakthuset och att den snäppt fast.


⑤

Välj passande silikonpackning (6 eller 8,5 mm), och trä den på kabeln. Drag åt muttern så att packningen tätar mot kontakthuset (Vridmoment: 2-2,5Nm.)

Obs, det finns två olika silikon tätningar att välja på:
6mm - för kabeldiam. 5-8mm
8.5mm - för kabeldiam. 7-10mm

För korrekt tätning vid hopkoppling har respektive kontakt markeringar som ska linjera med varandra när de är korrekt kopplade.

Demontering:
Skruva loss muttern, samt lossa silikonpackningen.
Se bilden.

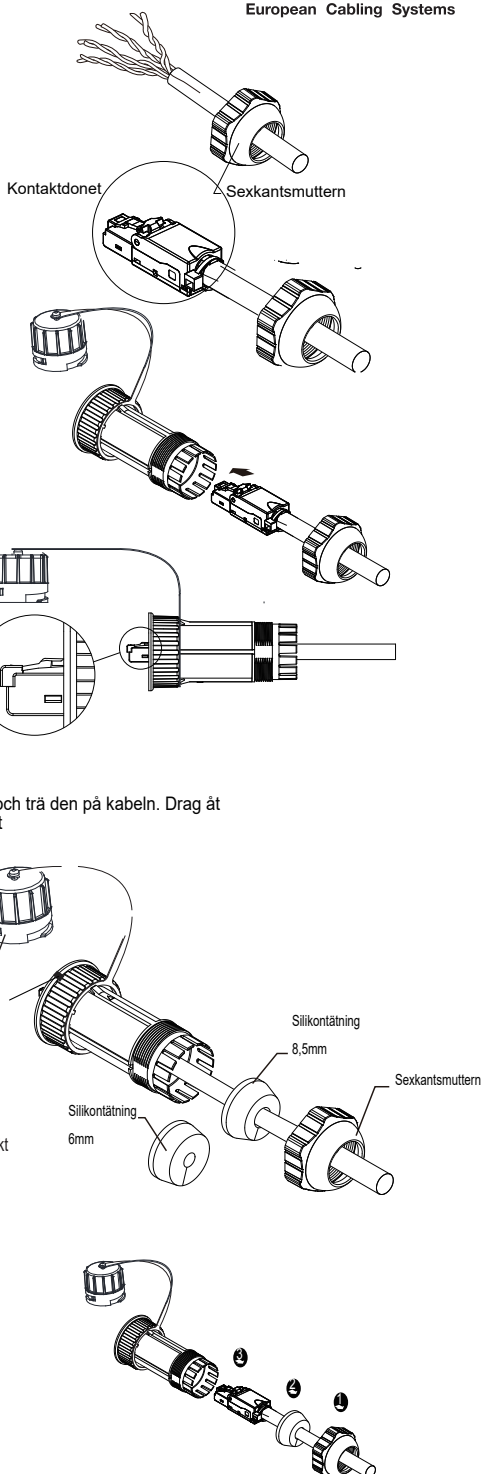

AFPS6A


Alcadon Field Plug Shielded Cat6A



European Cabling Systems


①

Remove the stopper before installation.

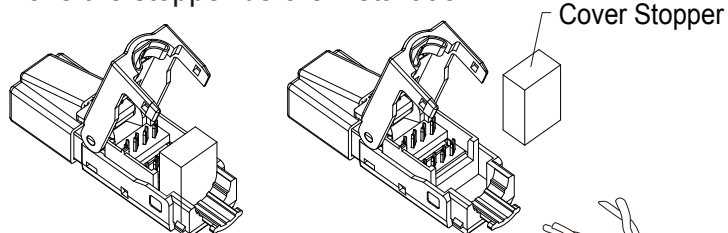


②

Insert cable through cable gland boots, strip off 1.2 inch of cable jacket, fold back the drain wire. Fan out all four twisted pairs, cut the conductors as shown.

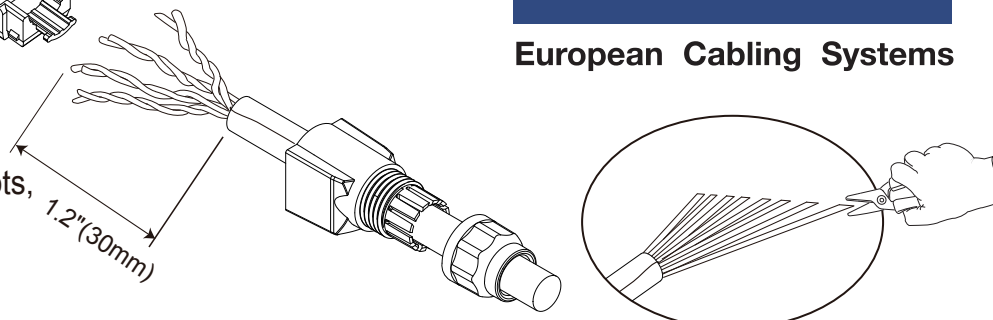


③

Following the color coding label and allocate each conductors into proper slots on wiring cap. Trim the ends of excess conductors.

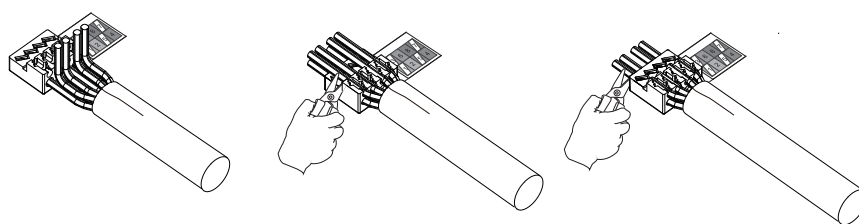


④

Remove the wiring label before place wiring cap on plug.

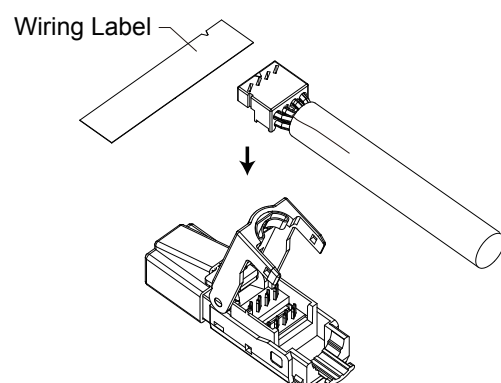


⑤

Place the wiring cap onto plug, use plier to clamp wiring cap until it completely snap-in to effect the connection.

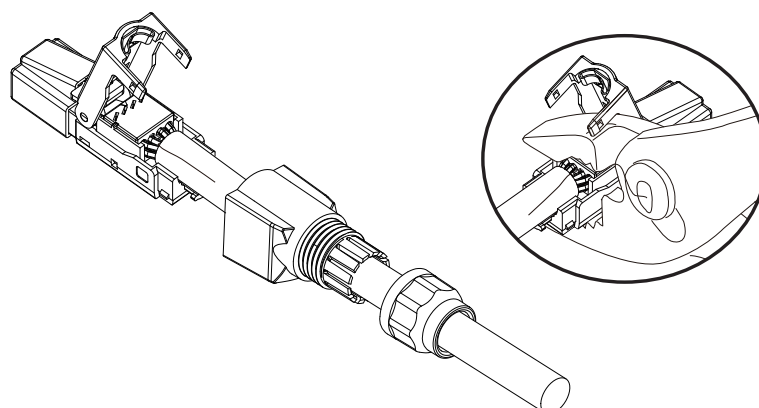


⑥

Close plug cover, make sure the drain wire is in proper contact with grounding clip on plug. Pull back cable gland boots to cover the plug. Rotate the cable gland to fasten and complete installation.

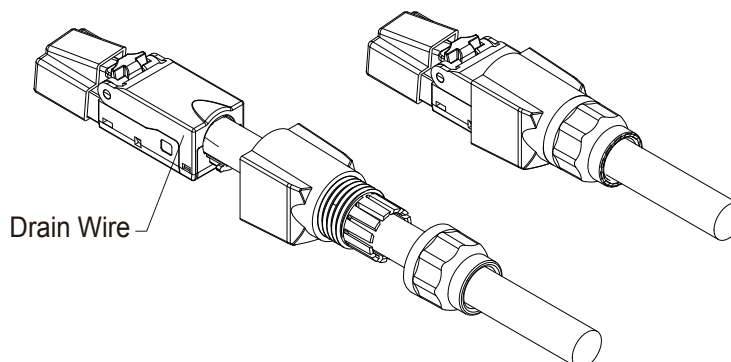

Unload the cable

Releasing the cable gland boots. Using flat screw driver and pry gently on plug cover one end first and the other end subsequently to open it.

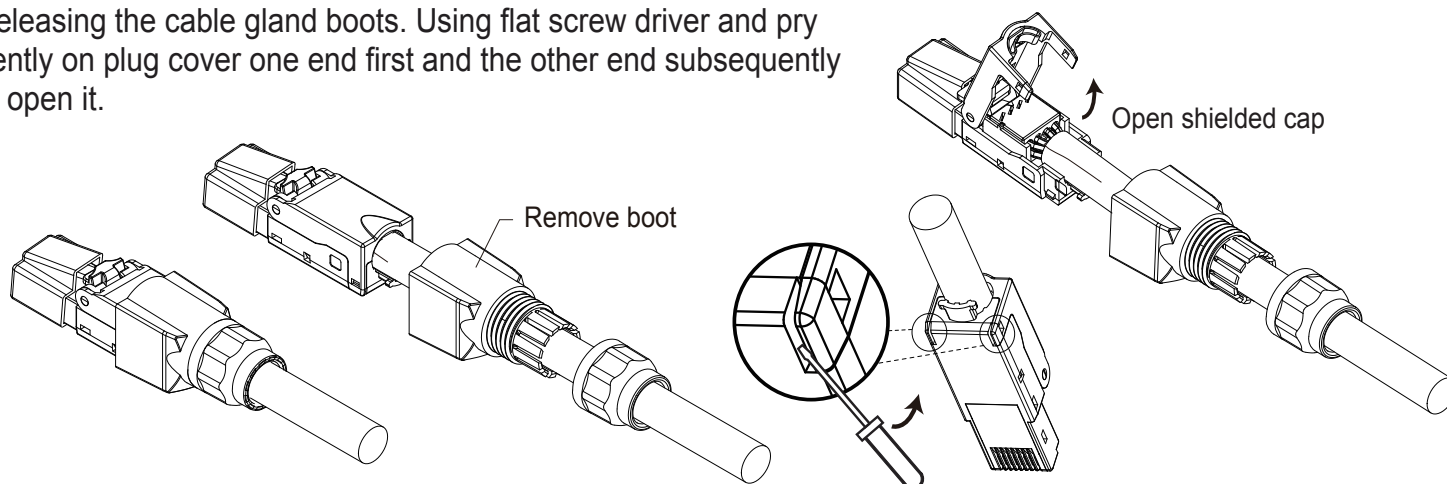

RoHS

