Sticklers™ Pro360°™ Touchless Fiber End Face Cleaning Tool





Step 1 - Setup

Start by removing handset from cradle, turn Pro360° unit upside down, and place on a steady surface. Loosen wing-screw and remove battery pack by pulling up on square end. Loosen the bridge thumb dial counterclockwise until the bridge is free to rotate to one side. Take the fluid canister and insert into open well making sure the metal spring clip is over the edge of the canister securely. Rotate the bridge by centering over the fluid valve, tighten the bridge thumb dial clockwise until dial stops rotating, but do not overtighten.

Replace battery pack by first removing the protective tape on the plug receptacle, align the pack with the unit and hand tighten the wing-screw. Retrieve the universal power cord from the white box, choose the correct plug adapter type for your area and charge the Pro360° unit until battery indicator light is green on the side panel.


Step 2 - Clean

Always keep the Pro360° unit upright and vertical. Do not lay it on its side and try to clean. Power up the unit by press and hold the Power Button for 3.5 seconds. The unit will self calibrate then go into stand-by mode. Power Button will back illuminate green indicating you are ready to clean. Add the appropriate size cleaning tip (1.25mm or 2.5mm) to the handset via a threaded hand tight mount.

Portable Cleaning: The Pro360° comes with a shoulder strap so attach to unit by pressing the center button of the strap end, insert into mounting slots on the handle, release button to mount. One mounting slot on each side of handle for a balanced fit. Next, unwrap the metal handset cord from its storage plate, hold handset in hand, place cleaning tip into bulkhead (female) and give a slight push to activate cleaning cycle. Relax hand but do not pull away until 3.8 second cleaning cycle is completed. Remove handset and repeat with a male patch cord. Once completed, you can inspect or mate the two connectors. Note a second cycle maybe needed for excessive dirty environments.

Line Power (Benchtop) Cleaning: Unwrap the metal handset cord once from storage plate for extra play and place handset with cleaning tip protected in cradle as shown. Male end fiber connectors can easily be cleaned by aligning ferrule to cleaning tip end, press / relax / hold in place to activate 3.8 second cleaning cycle.

Pro360° is a touchless fiber optic end face cleaning tool with interchangeable cleaning tips for portable or benchtop use. Incorporates a non-contact, 360° cleaning across the full end face to eliminate static and migratory matter getting near the core.

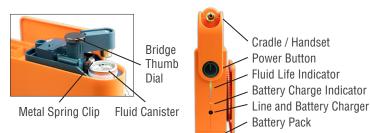





Scan the QR code or visit

sticklerscleaners.com/en-US/Sticklers-Pro-360-Touchless for more detailed instructions on how to get the most out of your Pro360°.

SticklersCleaners.com